
Rear seat entertainment system features (if equipped)

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.



- Front audio system
- 2 Display
- Headphone volume control dials and headphone jacks
- 4 DVD player
- **5** A/V input adapter
- 6 Power outlet
- 7 Rear seat entertainment system controller
- 8 Power outlet main switch

Opening and closing the display

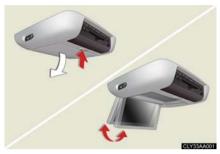

Press the lock release button to open the display.

Pull the display down to an easily viewable angle (between 90° and 125°).



To close the display, press the display up until a click is heard to close the display.

The illumination of the screen is automatically turned off when the display is closed. However, the rear seat entertainment system is not turned off.

Loading a disc



Insert the disc into the slot with the label side up.

The DISC indicator light turns on while the disc is loaded.


The player will play the track or chapter, and will repeat it after it reaches the end.

Ejecting a disc



Press and remove the disc.

Headphone jacks

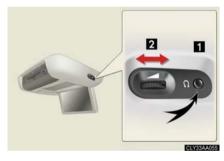

- To use the headphones, connect them to the jack.
- To adjust the volume Right side dial: Turn it toward the front of the vehicle to increase the volume. Turn it toward the

the volume.

Left side dial: Turn it toward the rear of the vehicle to increase the volume. Turn it toward the front of the vehicle to decrease the volume.

rear of the vehicle to decrease

$\, n \,$ The rear seat entertainment system can be used when

The engine switch is in the ACC or ON position.

n Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



















n When S appears on the screen

It indicates that the selected switch cannot work.

n Rear system lock

 \rightarrow P. 232

n Error messages

DISC CHECK: Indicates that the disc is dirty, damaged or was inserted upside

down. Clean the disc or insert it correctly.

REGION ERROR: Indicates that the DVD region code is not set properly.


DVD ERROR: Indicates that there is a problem inside the player. Eject the disc.

Set the disc again.

If the malfunction still exists, take the vehicle to your Lexus

dealer.

n Before using the remote control (for new vehicle owners)

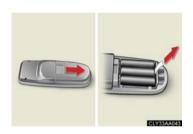

An insulating sheet is set to prevent the batteries from being discharged. Remove the insulating sheet before using the remote control.

n Headphones

With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Please contact your Lexus dealer for further details.

n Volume

- 1 Adjust the volume when you connect the headphones to the jack. Loud sounds may have a significant impact on the human body.
- 1 Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

A CAUTION

n While driving

Do not use headphones.

Doing so may cause an accident, resulting in death or serious injury.

n When the rear seat entertainment system is not used

Keep the display closed.

In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.

n To prevent accidents and electric shock

Do not disassemble or modify the remote control.

n When the remote control is not used


Stow the remote control.

Injuries may result in the event of an accident or sudden braking.

3


Using the DVD player (DVD video)

n Remote control

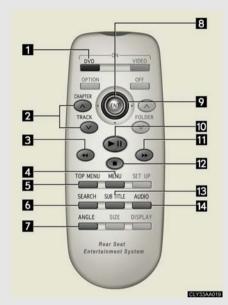


- Turning on the DVD mode
- Selecting a chapter
- 3 Reversing a screen
- 4 Turning on the menu screen
- 5 Turning on the title selection screen
- 6 Searching the title
- Changing the screen angle
- Inputting the selected switch
- Selecting a switch
- Playing/pausing a screen
- Fast forwarding a screen
- Stopping a screen
- Changing the subtitle language
- Changing the audio language

n Unit

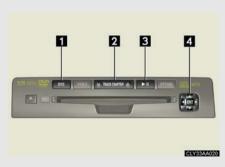


- 1 Turning on the DVD mode
- Skipping to the desired chapter
- Playing/pausing a screen
- Selecting a switch/inputting the selected switch

n Display (Page 1)

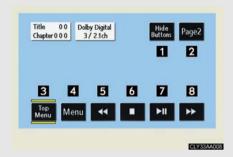

- Turning off the operation switches on the display
- Displaying Page 2
- In Turning on or off the title selection screen for the disc
- 4 Turning on or off the menu screen for the disc
- 5 Reversing a screen
- 6 Stopping a screen
- Pausing the disc/canceling the pause
- 8 Fast forwarding a screen

n Display (Page 2)

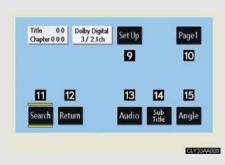

- Displaying to the initial setting screen
- Displaying to Page 1
- Search for a title
- Returning to the previous
- Changing the audio language
- Changing the subtitle language
- Changing the angle

⚠ NOTICE

n Cleaning the display

Wipe the display with a dry soft cloth.

If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

n To prevent damage to the remote control

- 1 Keep the remote control away from direct sunlight, temperature heat and high humidity.
- 1 Do not drop or knock the remote control against hard objects.
- 1 Do not sit on or place heavy objects on the remote control.

n DVD player

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

Turning on or off the operation switches

Press or to turn on the operation switches.

Press or once again or select Hide Buttons to turn off the operation switches.

Turning on the title selection screen

Press Top Menu or select to turn on the title selection screen. For the operation of the title selection screen, see the separate manual for the DVD disc


Turning on the menu screen

Press Menu or select to turn on the menu screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Returning to the previous screen

Press Return to return to the previous screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Searching for a title

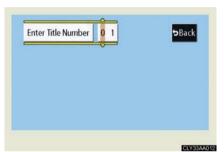


Press or select Search to display the screen to search for a title

Select the title number, and press ENT to input it.

Select **b**Back to return to the previous screen.

Changing the subtitle language

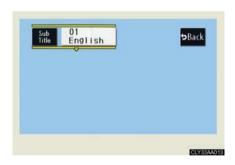


Press or select to display the subtitle language screen.

Each time is pressed or sub is selected, another language stored on the disc is selected.

Select **5**Back to return to the previous screen.

Changing the audio language

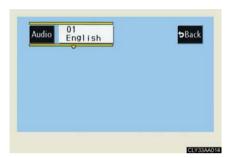


Press or select Audio to display the audio language screen.

Each time is pressed or Audio is selected, another language stored on the disc is selected.

Select **5**Back to return to the previous screen.

Changing the angle

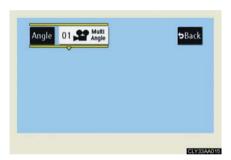

Press or select Angle to display the screen to change the angle.

Angle is selected, the angle changes.

Select **5**Back to return to the previous screen.

n DVD player and DVD video discs

This DVD player is compatible NTSC color TV formats. DVD video discs conforming to other formats such as PAL or SECAM cannot be used.

n Region codes

Some DVD video discs have a region code indicating where you can use them. If the DVD video disc is not labeled ALL or 1, you cannot use it in this DVD player. If you attempt to play an inappropriate DVD video disc in this player, REGION CODE ERROR appears on the screen. Even if the DVD video disc does not have a region code, in some cases you cannot use it.

n Marks shown on DVD video discs

NTSC	Indicates NTSC format of color TV.
2))	Indicates the number of audio tracks.
.2.	Indicates the number of language subtitles.
31	Indicates the number of angles.
16:9 LB 4:3	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates regions in which this video disc can be played. All: all countries Number: region code

n DVD video disc glossary

- 1 DVD video discs: Digital Versatile Discs that holds world's standard video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology has been adopted in which the volume of data assigned to the picture is changed depending on the picture format. Audio data is stored using PCM and Dolby digital, which enables higher sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.
- 1 Viewer restrictions: This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.
 - Level 1: DVD video discs for children can be played.
 - Level 2 7: DVD video discs for children and G-rated movies can be played.
 - Level 8: All types of DVD video discs can be played.

- 1 Multi-angle feature: Allows you to enjoy the same scene at different angles.
- 1 Multi-language feature: Allows you to select the language of the subtitles and audio.
- 1 Region codes: Region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player.
- 1 Audio: This DVD player can play liner PCM, Dolby digital, dts and MPEG audio format DVD. Other decoded type cannot be played.
- 1 Title and chapter: Video and audio programs stored on DVD video discs are divided into sections by title and chapter.
- 1 Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one piece of a movie, one album, or one audio program is assigned as a title.
- 1 Chapter: A unit smaller than a title. A title comprises multiple chapters.

n Audio


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and Da are trademarks of Dolby[©] Laboratories. Confidential unpublished works. 1992-1997 Dolby[©] Laboratories. All rights reserved.

"dts" is a trademark of Digital Theater Systems, Inc.

3-3. Using the rear audio system


Using the DVD player (video CD)

n Remote control

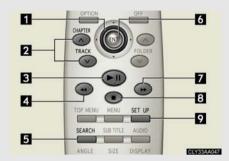


- 1 Selecting a switch
- 2 Selecting a chapter
- 3 Playing/pausing a screen
- 4 Reversing a screen
- **5** Displaying operation switches
- 6 Inputting the selected switch
- 7 Fast forwarding a screen
- **8** Stopping a screen
- O Changing the initial setting

n Unit

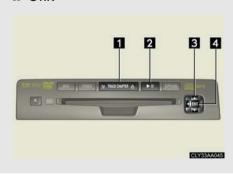

- Skipping to the desired chapter
- 2 Playing/pausing a screen
- 3 Selecting a switch
- 4 Inputting the selected switch

n Display (page 1)

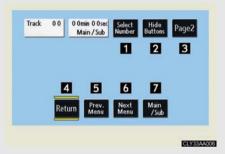

- Selecting a disc menu number
- 2 Turning off the menu screen
- Displaying page 2
- 4 Turning on the disc menu
- Seturning to the previous page screen (with the disc menu displayed)
- Proceeding to the next page screen (with the disc menu displayed)

n Display (page 2)



- B Displaying page 1
- Reversing a screen
- Pausing the disc/canceling the pause
- Tast forwarding a screen


Selecting a disc menu number

Select Select to display the disc menu number search screen.

Select the disc menu number, and press ENT to input it.
Select DBack to return to the previous screen.

3-3. Using the rear audio system

Using the DVD player (audio CD/ CD text)

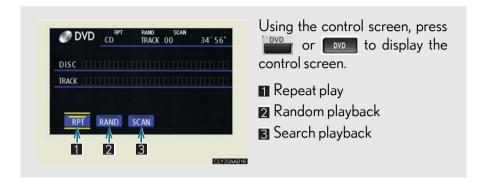


n Canceling random, repeat and scan play

Select RPT, RAND or SCAN again.

3

Using the DVD player (MP3 discs)

n Using the control screen

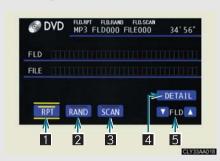

Press or to display the control screen.

- Repeat play
- Random playback
- Search playback
- Displaying file information
- **5** Selecting folder

Repeat play

n Repeat a file

Select RPT.

n Repeat all of files in a folder

Select rand press and hold ENT on the remote control.

Random playback

 $n\ \ \mbox{Playing files from a particular folder in random order}$

Select RAND.

n Playing all of the files on a disc in random order

Select RAND, and press and hold ENT on the remote control.

Search playback

 $\, n \,$ Selecting the desired file by cueing the files in the folder

Select SCAN .

The player will scan all the files in the folder. Each file will be played for 10 seconds.

 $\, {
m n} \,$ Selecting the desired file by cueing the folders on the disc

Select SCAN, and press and hold ENT the remote control. The player will scan all the folders on the disc. The first file in each folder will be played for 10 seconds.

n Canceling random, repeat and play back

Select RPT , RAND or SCAN again.


3-3. Using the rear audio system Using the video mode



Press or video to select the video mode.

Before switching to the video mode, connect the audio machine to the input terminal adapter.

Using the adapter

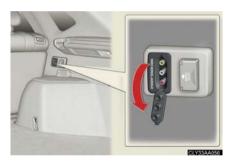

Open the cover.

The A/V input adapter is composed of 3 input adapters.

Yellow: Image input adapter

White: Audio input adapter

Red: Audio input adapter

n A/V input adapter

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input adapter. For details, refer to the manufacturer's instructions.

n Power outlet

The power outlet is used to connect the audio device. $(\rightarrow P. 279)$

⚠ NOTICE

n When the A/V input adapter is not in use

Keep the A/V input adapter cover closed. Inserting anything other than an appropriate plug may cause electrical failure or short circuit.

3

Changing the initial setting



Press or select Set Up to display the initial setting screen.

The following initialization can be changed here.

Audio language

Subtitle language

DVD language

Angle mark

Parental lock

Changing the audio language



Select "Audio Language". Select the language you want to hear, and press ENT to input it.



Select "Others" if you cannot find the language you want to hear. Enter the appropriate 4-digit language code. Select a number, and press ENT to input it.

Language code list (\rightarrow P. 259) If a code that is not in the list is entered, Incorrect Code will appear on the screen.

Changing the subtitle language



Select "Subtitle Language". Select the language you want to read, and press ENT to input it.



Select "Others" if you cannot find the language you want to read. Enter the appropriate 4-digit language code. Select a number, and press ENT to input it.

Language code list $(\rightarrow P. 259)$ If a code that is not in the list is entered, Incorrect Code will appear on the screen.

Changing the DVD language



Select "DVD Language". Select the language you want to read and press ENT to input it.



Select "Others" if you cannot find the language you want to read. Enter the appropriate 4-digit language code. Select a number, and press ENT to input it.

Language code list $(\rightarrow P. 259)$ If a code that is not in the list is entered, Incorrect Code will appear on the screen.

Turning on or off the angle mark

The angle mark can be turned on for discs that are multi-angle compatible.

Each time you press ENT when "Angle Mark" is selected, the angle mark turns on or off alternately.

Setting viewer restriction levels





Setting a password allows the viewer restriction to be effective.

Select "Parental Lock".

Enter the password and press ENT. The setting cannot be changed unless the password is entered.

When you forget the password, initialize the password. $(\rightarrow P. 259)$

Select a restriction level (1-8), and press ENT. The smaller the level number, the stricter the age limit.

Setting the display mode



Pressing changes the display modes sequentially as follows:

Normal \rightarrow Wide 1 \rightarrow Wide 2

n Returning to the previous screen

Select **5**Back, and press ENT.

n To initialize the password

Press ◀ on the remote control or unit ten times when the screen to enter the personal code is displayed.

n Language code list


Code	Language	Code	Language
1001	Japanese	0207	Bulgarian
0514	English	0208	Bihari
0618	French	0209	Bislama
0405	German	0214	Bengali
0920	Italian	0215	Tibetan
0519	Spanish	0218	Breton
2608	Chinese	0301	Catalan
1412	Dutch	0315	Corsican
1620	Portuguese	0319	Czech
1922	Swedish	0325	Welsh
1821	Russian	0401	Danish
1115	Korean	0426	Bhutani
0512	Greek	0515	Esperanto
0101	Afar	0520	Estonian
0102	Abkhazian	0521	Basque
0106	Afrikaans	0601	Persian
0113	Amharic	0609	Finnish
0118	Arabic	0610	Fiji
0119	Assamese	0615	Faroese
0125	Aymara	0625	Frisian
0126	Azerbaijani	0701	Irish
0201	Bashkir	0704	Scots-Gaelic
0205	Byelorussian	0712	Galician

Code	Language	Code	Language
0714	Guarani	1311	Macedonian
0721	Gujarati	1312	Malayalam
0801	Hausa	1314	Mongolian
0809	Hindi	1315	Moldavian
0818	Croatian	1318	Marathi
1821	Hungarian	1319	Malay
1825	Armenian	1320	Maltese
0901	Interlingua	1325	Burmese
0905	Interlingue	1401	Nauru
0911	Inupiak	1405	Nepali
0914	Indonesian	1415	Norwegian
0919	Icelandic	1503	Occitan
0923	Hebrew	1513	(Afan) Oromo
1009	Yiddish	1518	Oriya
1023	Javanese	1601	Punjabi
1101	Georgian	1612	Polish
1111	Kazakh	1619	Pashto, Pushto
1112	Greenlandic	1721	Quechua
1113	Cambodian	1813	Rhaeto-Romance
1114	Kannada	1814	Kirundi
1119	Kashmiri	1815	Romanian
1121	Kurdish	1823	Kinyarwanda
1125	Kirghiz	1901	Sanskrit
1201	Latin	1904	Sindhi
1214	Lingala	1907	Sangho
1215	Laothian	1908	Serbo-Croatian
1220	Lithuanian	1909	Sinhalese
1222	Latvian	1911	Slovak
1307	Malagasy	1912	Slovenian
1309	Maori	1913	Samoan

Code	Language
1914	Shona
1915	Somali
1917	Albanian
1918	Serbian
1919	Siswati
1920	Sesotho
1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog

Code	Language
2014	Setswana
2015	Tonga
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

n Adjusting the screen

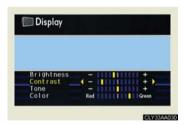

Press DISPLAY

Select the brightness, contrast, tone or color, and make adjustments. Press or ENT to input it.

	- or Red	+ or Green
Brightness	Darkens	Brightens
Contrast	Weakens the contrast	Strengthens the contrast
Tone	Weakens the tone	Strengthens the tone
Color	Strengthens the red color	Strengthens the green color